


Slimline Flammable Cabinets

Product Images





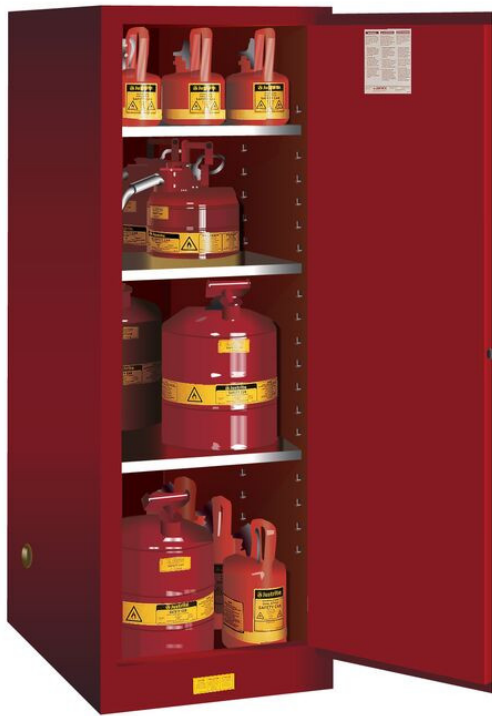

Short Description

- **Compact Design:** Ideal for limited floor space, measuring 65 inches in height and 23.25 inches in width
- **Durable Construction:** Built with welded, 18-gauge steel double-walls and 1.5 inches of insulating air space for superior fire resistance
- **Spill Management:** Features SpillSlope galvanized steel shelves directing spills to a 2-inch leakproof sump for safety and compliance
- **Secure Closure:** Includes a three-point self-latching door system, available in manual closing or self-closing options
- **Compliance and Warranty:** Meets NFPA and OSHA regulations, FM-approved, with a ten-year warranty for reliability

- Versatile Options: Available in four colors (yellow, red, gray, White) and two capacities (22 or 54 gallons) to meet specific storage needs

Description

Justrite Slimline Safety Cabinets are designed to provide safe storage for flammable and combustible liquids in environments where floor space is limited. These cabinets feature a compact design, measuring 65 inches in height and 23.25 inches in width, making them ideal for placement alongside larger safety cabinets or in areas such as labs, R&D rooms, garages, and machine shops.

Constructed with welded, 18-gauge steel double-walls and 1.5 inches of insulating air space, these cabinets offer superior fire resistance and compliance with NFPA and OSHA regulations. They include a three-point self-latching door system, a 2-inch leakproof sump, and dual vents with integral flame arresters. The built-in grounding connector ensures proper grounding to reduce static buildup. The cabinets feature SpillSlope galvanized steel shelves that direct spills to the back and bottom of the sump, meeting EPA requirements. Highly reflective Haz-Alert warning labels provide visibility under fire conditions or during power outages.

To configure your Slimline Safety Cabinet, select from various color options, including yellow for flammables, red for combustibles, gray and White for waste storage. Choose between capacities of 22 or 54 gallons to meet your specific storage needs. Additionally, select between manual closing or self-closing doors to ensure compliance with your safety requirements.

Self-closing doors are a critical safety feature, offering enhanced protection against fires and accidental releases. These doors automatically close and latch in the event of a fire or emergency, using fusible links that melt at 165°F (74°C), causing the doors to shut automatically. This feature minimizes human error by ensuring that the cabinet is always properly closed, even when staff are distracted or forgetful. While manual closing doors are available, self-closing doors provide the safest option, especially in environments where safety is paramount.

Justrite Slimline Safety Cabinets are FM-approved and carry a ten-year warranty, ensuring peace of mind and reliable performance. By configuring your cabinet, you ensure a safe and compliant storage solution tailored to your unique needs.

Specifications

Model No	89-SL
----------	-------

Prop 65

⚠️WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Product Options

Color:	Red
	Yellow
	Gray
	White
Capacity:	22 gallon
	54 gallon
Door Style:	Self Close
	Manual